



KUSTOS BT B 25




KUSTOS BT B 40

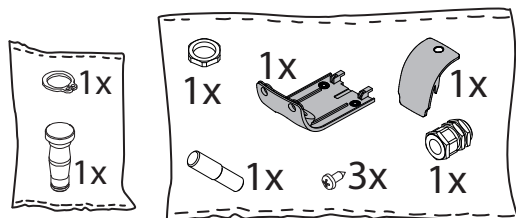



DB14421 OADA0_02 29-05-24

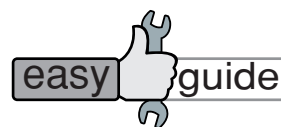

+

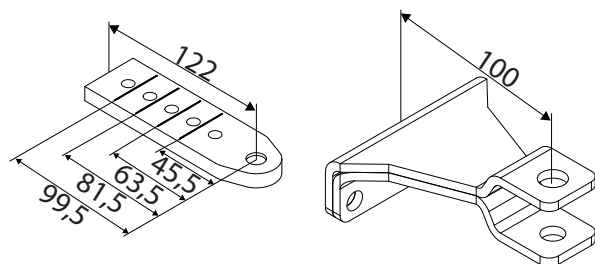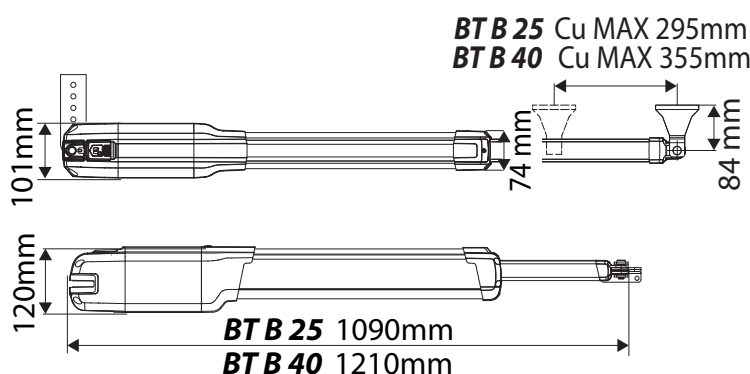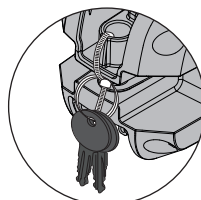





Example

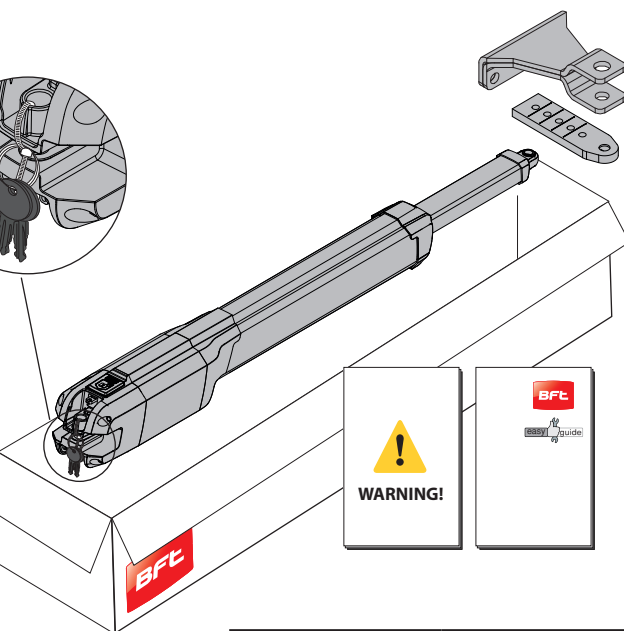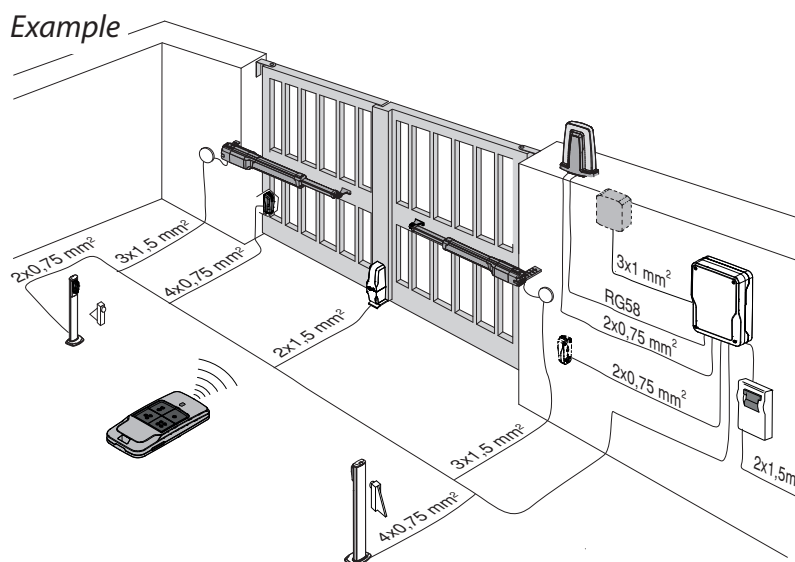

	KUSTOS BT B 25	KUSTOS BT B 40
24 V	40W	
IP	44	
	-20°C / +55°C	
cycles/h	30	
	<70 dBA	
Speed max	20mm/s	
Force 2.000 N (~200 kg)	Page 9	
	~ 12 s *	~ 16 s *

*
IT: Tempo indicativo misurato senza rallentamenti (anta massima e peso massimo).
EN: Indicative time measured without slowdowns (maximum door and maximum weight).
FR: Temps indicatif mesuré sans ralentissements (vantail maximum et poids maximum).
DE: Gemessene Richtzeit ohne Abbremsen (maximaler Flügel und maximales Gewicht).
ES: Tiempo orientativo medido sin ralentizaciones (puerta máxima y peso máximo).
NL: Indicatieve tijd gemeten zonder vertragingen (maximale vleugel en maximaal gewicht).
PT: Tempo indicativo medido sem desacelerações (porta máxima e peso máximo).
GR: Ενδεικτικός χρόνος μετρημένος χωρίς επιβραδύνσεις (μέγιστο φύλλο και μέγιστο βάρος).
PL: Orientacyjny czas mierzony bez spowolnień (maksymalne skrzydło i maksymalna waga).
RU: Ориентировочное время, измеренное без замедлений (максимальная створка и максимальный вес).
CZ: Orientační čas měřený bez zpomalení (maximální křídlo a maximální hmotnost).
TR: Yavaşlama olmadan ölçülen gösterge süre (maksimum kanat ve maksimum ağırlık).
HR: Indikativno vrijeme izmjereno bez usporavanja (maksimalni list i maksimalna težina).
RO: Timp orientativ măsurat fără încetiniri (frunză maximă și greutate maximă).

تم قياس الوقت الاسترشادي بدون تباطؤ (الحد الأقصى للباب والوزن الأقصى)

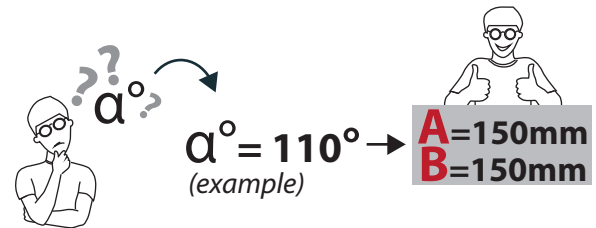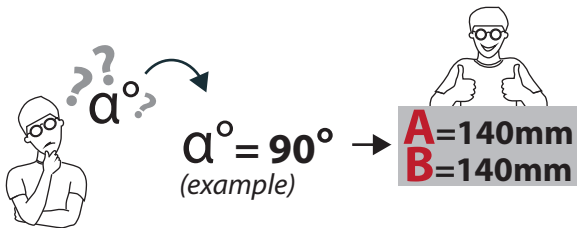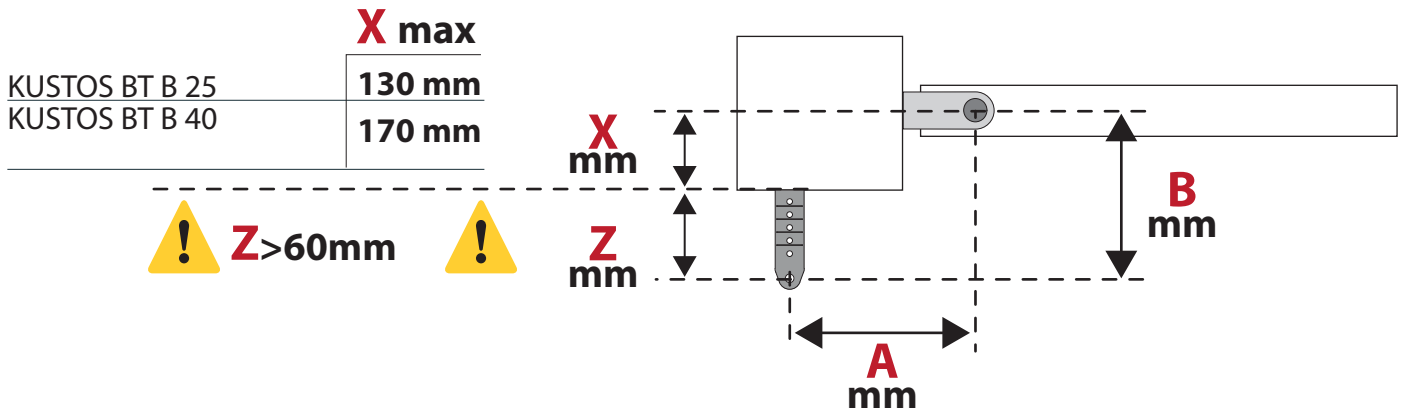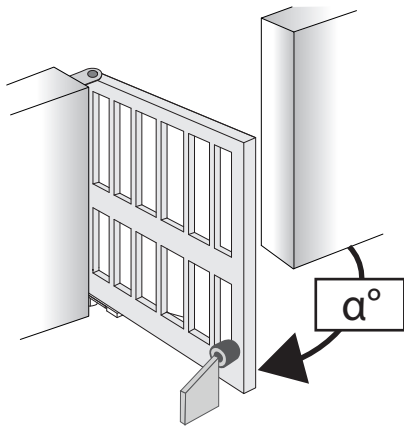

KUSTOS BT B 25

A ≈ B 👍

KUSTOS BT B 40



		A mm										
		100	110	120	130	140	150	160	170	180	190	
B mm	100	103°	108°	112°	116°	119°	110°	104°	99°	96°	93°	
	110	102°	106°	110°	114°	111°	105°	99°	96°	92°		
	120	101°	105°	109°	112°	106°	100°	96°	92°			
	130	100°	104°	108°	109°	101°	96°	92°				
	140	99°	103°	106°	102°	96°	92°					
	150	99°	103°	102°	96°	92°						
	160	99°	102°	96°	93°							
	170	98°	98°	91°								
	180	91°	92°									
	190	91°										
	200											
	210											

α°







		A mm													
		100	110	120	130	140	150	160	170	180	190	200	210	220	
B mm	100	103°	108°	112°	115°	118°	121°	124°	122°	114°	109°	104°	101°	98°	
	110	102°	106°	110°	113°	117°	120°	123°	116°	110°	105°	101°	98°	95°	
	120	101°	105°	109°	112°	115°	118°	121°	112°	106°	102°	98°	95°		
	130	101°	104°	108°	111°	114°	117°	114°	107°	102°	98°	95°			
	140	100°	103°	107°	110°	113°	116°	108°	103°	99°	95°				
	150	99°	102°	106°	109°	112°	114°	104°	99°	95°					
	160	98°	102°	105°	108°	110°	105°	99°	95°						
	170	98°	101°	104°	107°	107°	100°	95°							
	180	98°	101°	103°	106°	100°	95°								
	190	97°	100°	102°	105°	95°									
	200	97°	100°	101°	95°										
	210	96°	99°	97°											
	220	96°													

α°


2

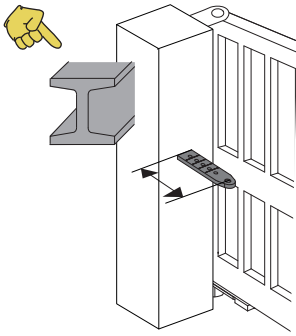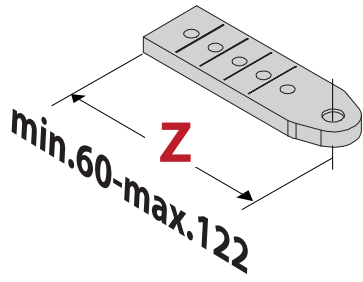


Z < 122mm

 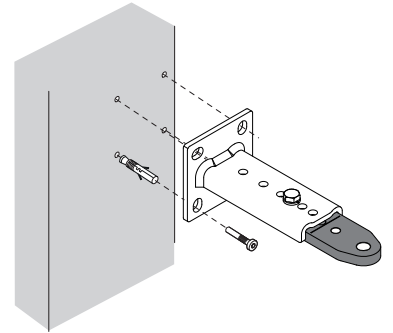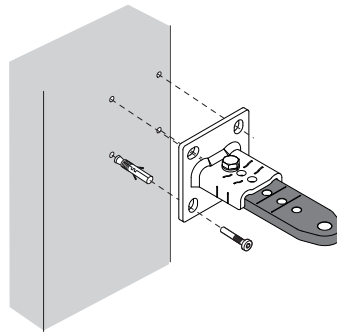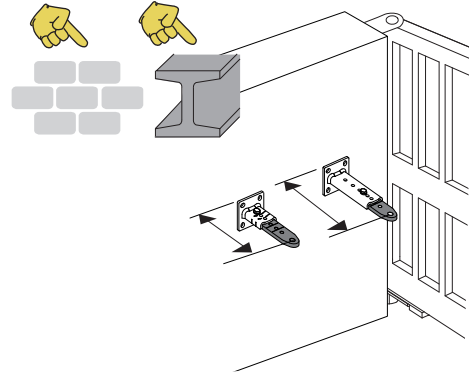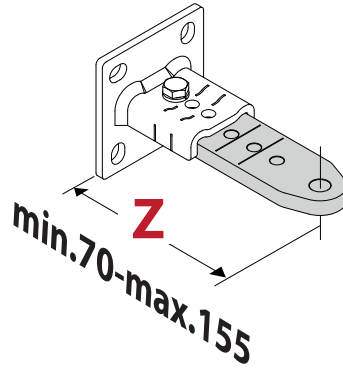
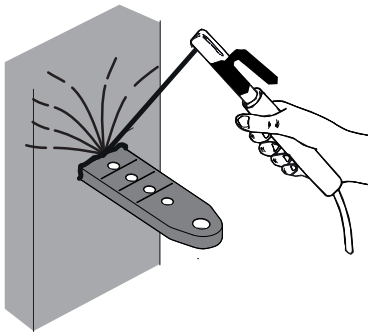


3

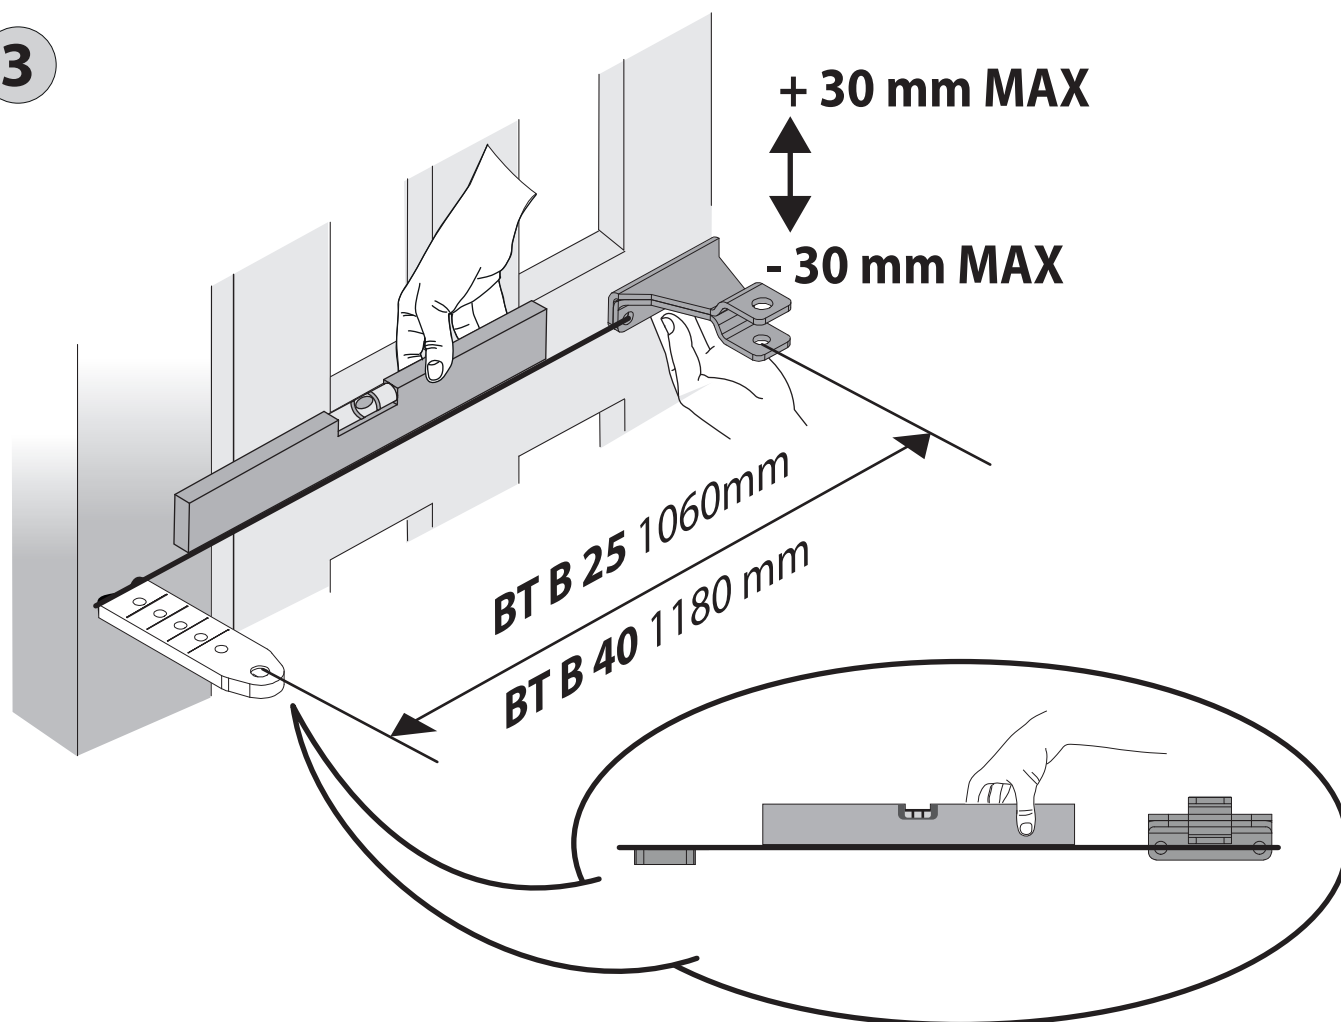


4

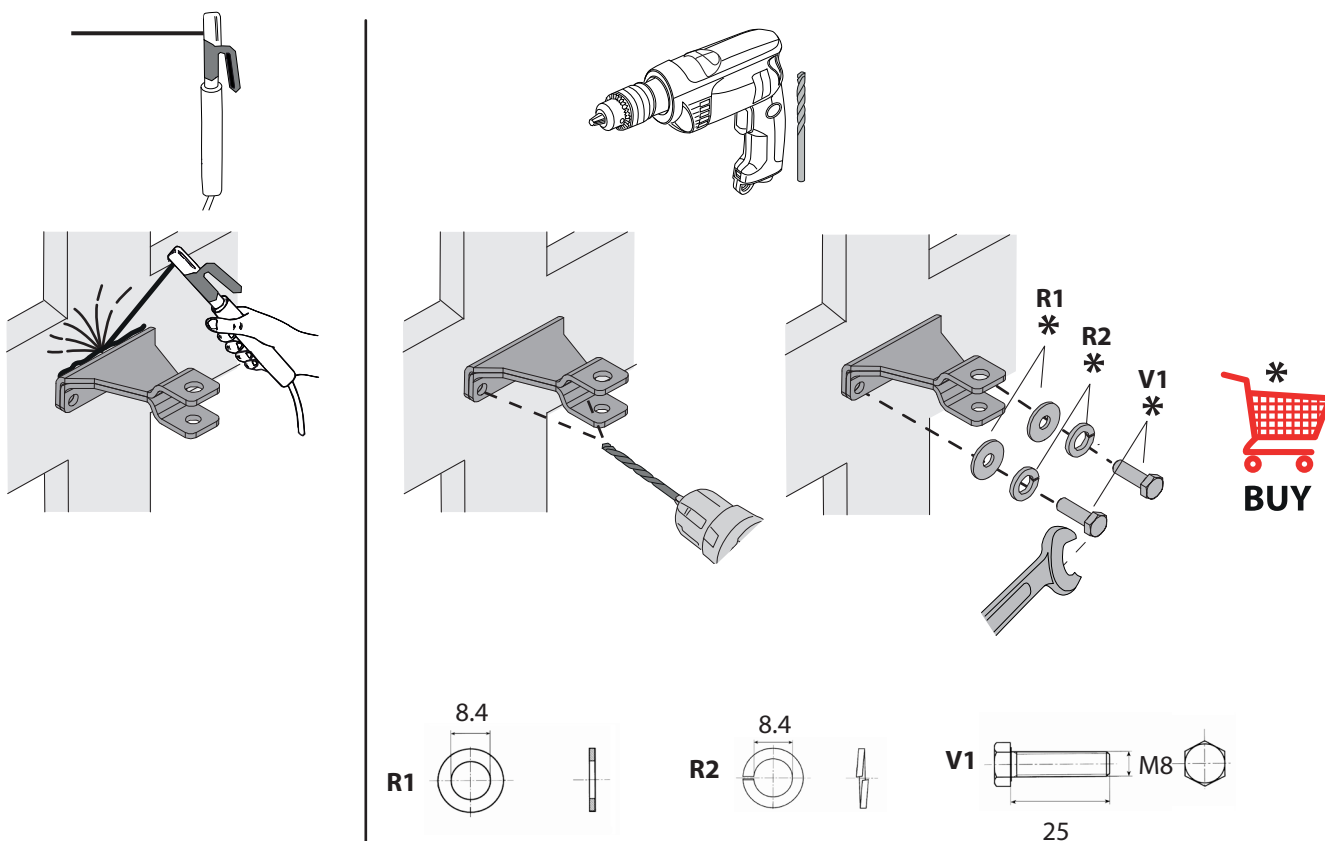


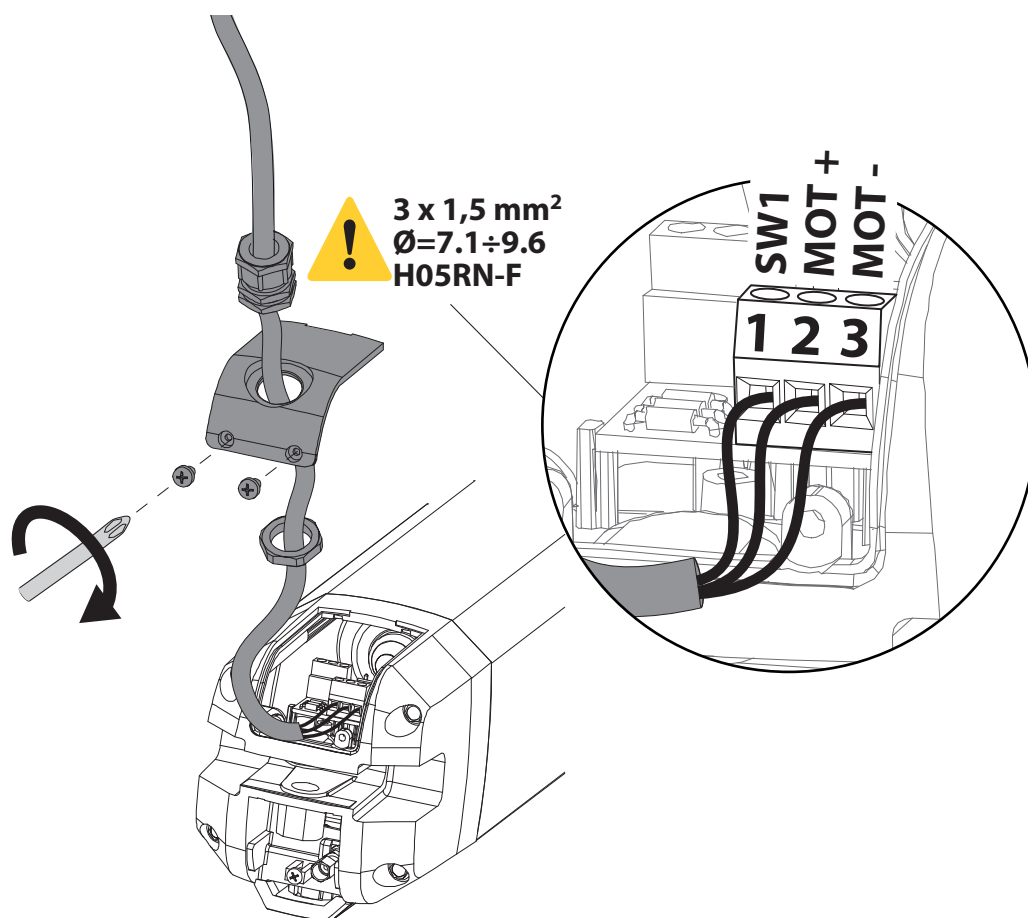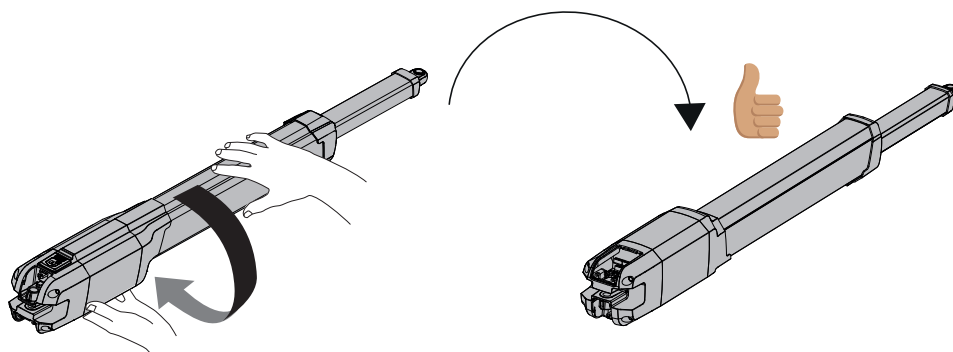

6

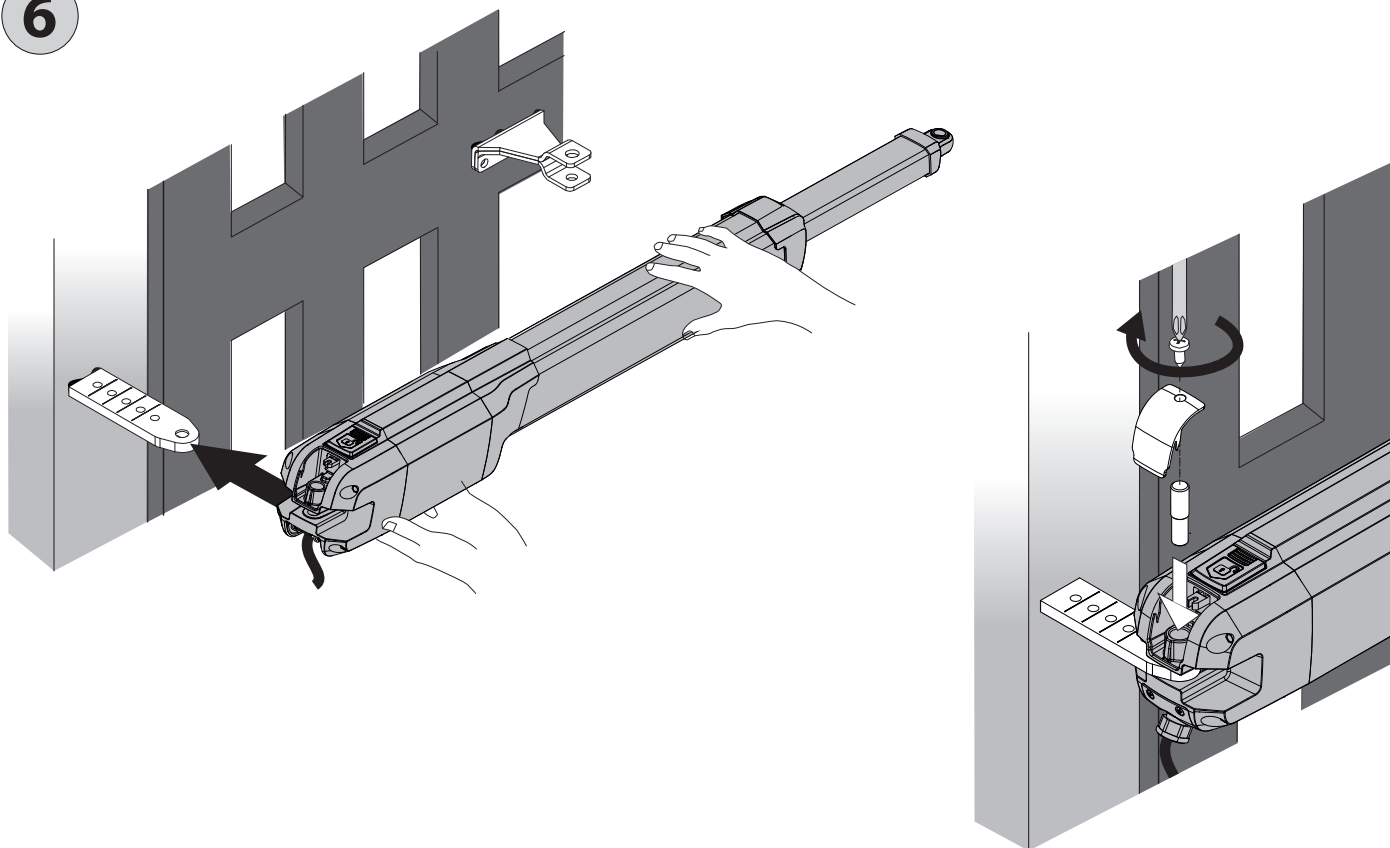

7

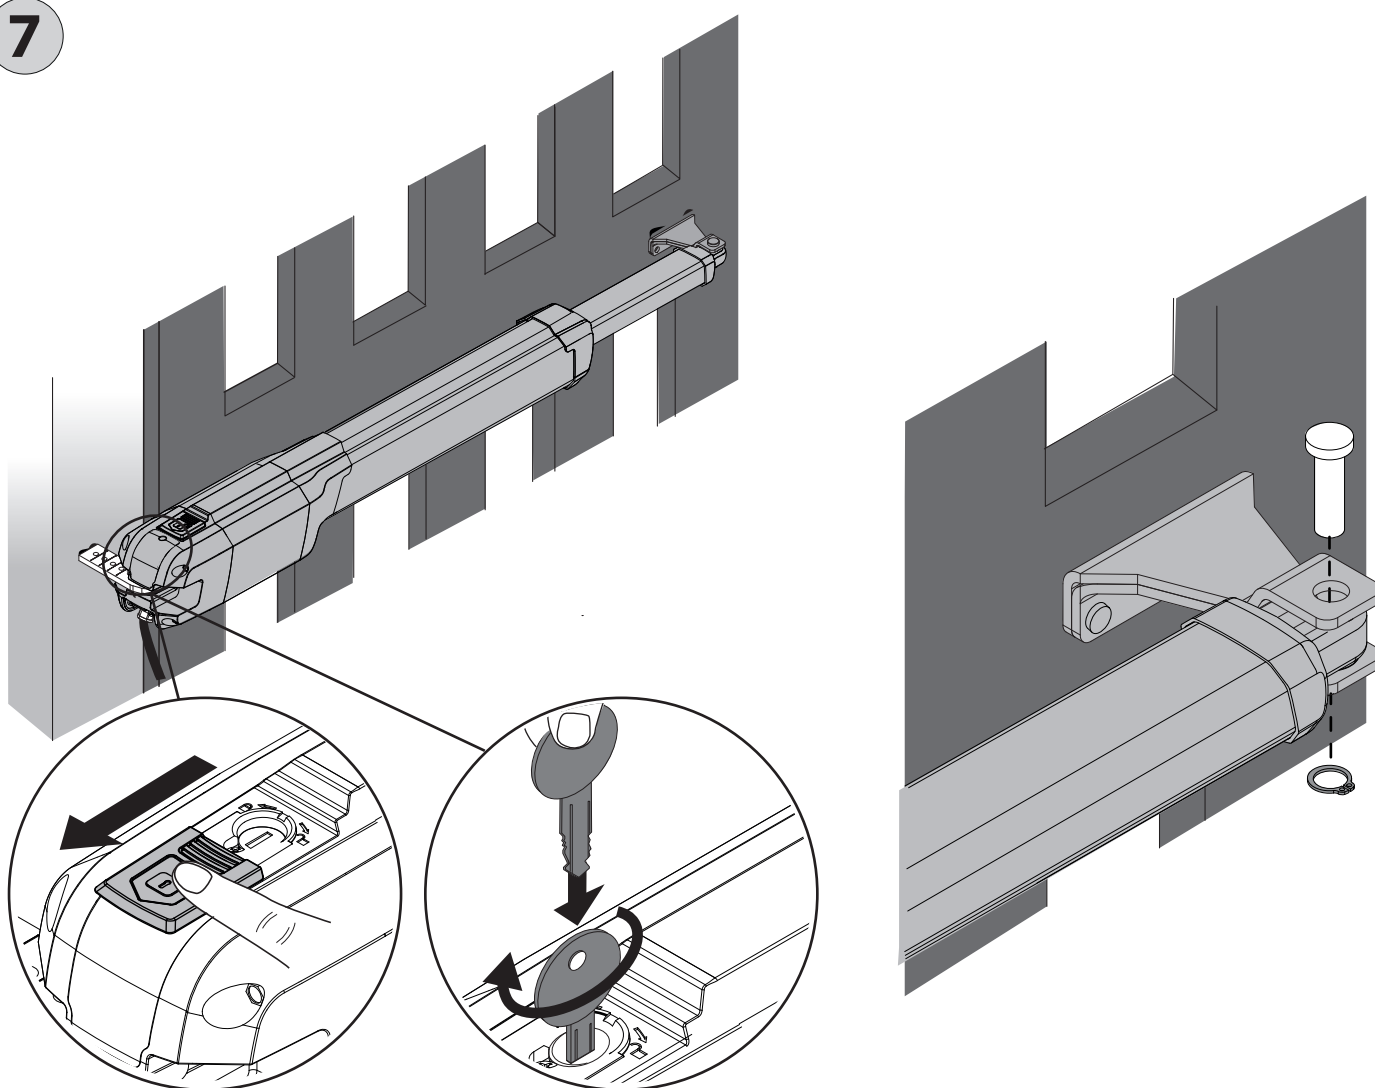

FINAL USER



**NO
POWER**









بدون طاقة

IT	MANOVRA MANUALE
EN	MANUAL OPENING
FR	OUVERTURE MANUELLE
ES	APERTURA MANUAL

DE	MANUELLE ÖFFNUNG
NL	HANDMATIGE OPENING
PT	ABERTURA MANUAL
EL	ΧΕΙΡΟΚΙΝΗΤΟ ΑΝΟΙΓΜΑ

PL	OTWIERANIE RĘCZNE
RU	РУЧНОЕ ОТКРЫТИЕ
CS	MANUÁLNÍ OTEVÍRÁNÍ
TR	MANUEL AÇMA

HR	RUČNO OTVARANJE
RO	DESCHIDERE MANUALĂ
فتح يدوي	AR

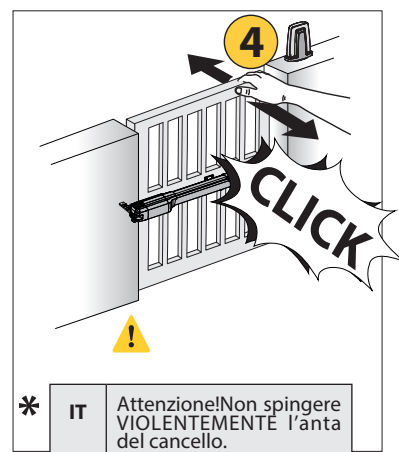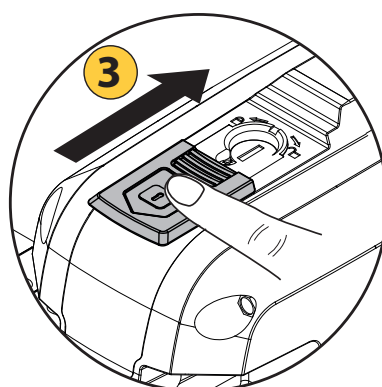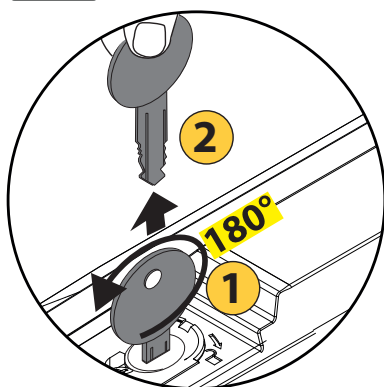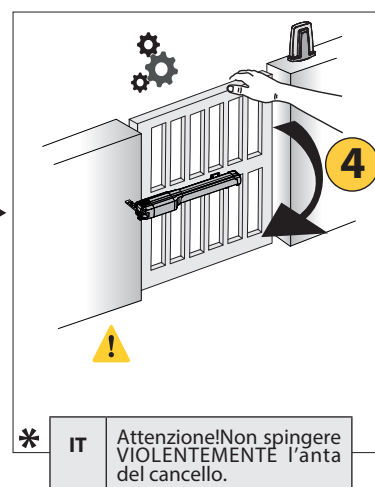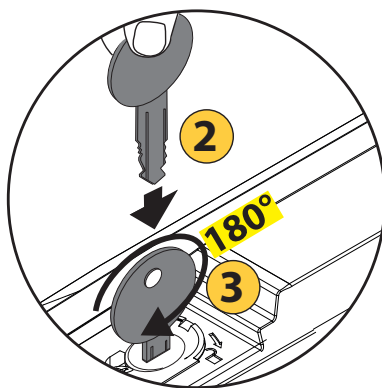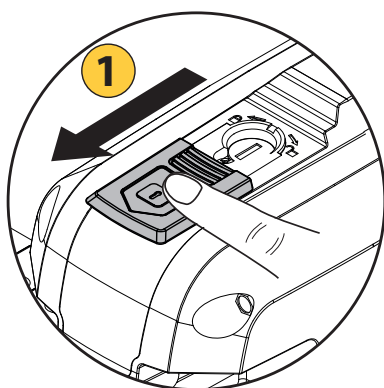


IT	Attenzione! Non spingere VIOLENTEMENTE l'anta del cancello.
EN	Warning! Do not push the gate WITH EXCESSIVE FORCE
FR	Attention! Ne poussez pas VIOLEMMENT le vantail du portail.
ES	¡Atención! No empuje CON VIOLENCIA la hoja de la puerta.
DE	Achtung! Schieben Sie den Torflügel nicht MIT GEWALT an.


NL	Let op! Duw niet MET GEWELD tegen de deur van het hek.
PT	Atenção! Não empurrar COM FORÇA a folha do portão.
EL	Προσοχή! Μην σπρώχνετε ΜΕ ΜΕΓΑΛΗ ΔΥΝΑΜΗ το φύλλο της πύλης.
PL	Uwaga! Nie należy GWAŁTOWNIE popychać skrzydła bramy.
RU	Внимание! Не толкайте СЛИШКОМ СИЛЬНО створку ворот.

CS	Pozor! Na křídlo brány netlačte PŘÍLIŠNOU SILOU.
TR	Dikkat! Kapının kanadını ŞİDDETLİ bir şekilde itmeyin.
HR	Nemojte gurati vrata uz primjenu PREKOMJERNE SILE!
RO	Nu împingeți bariera CU FORȚĂ EXCESIVĂ.
AR	لا تدفع البوابة بقوة زائدة

8

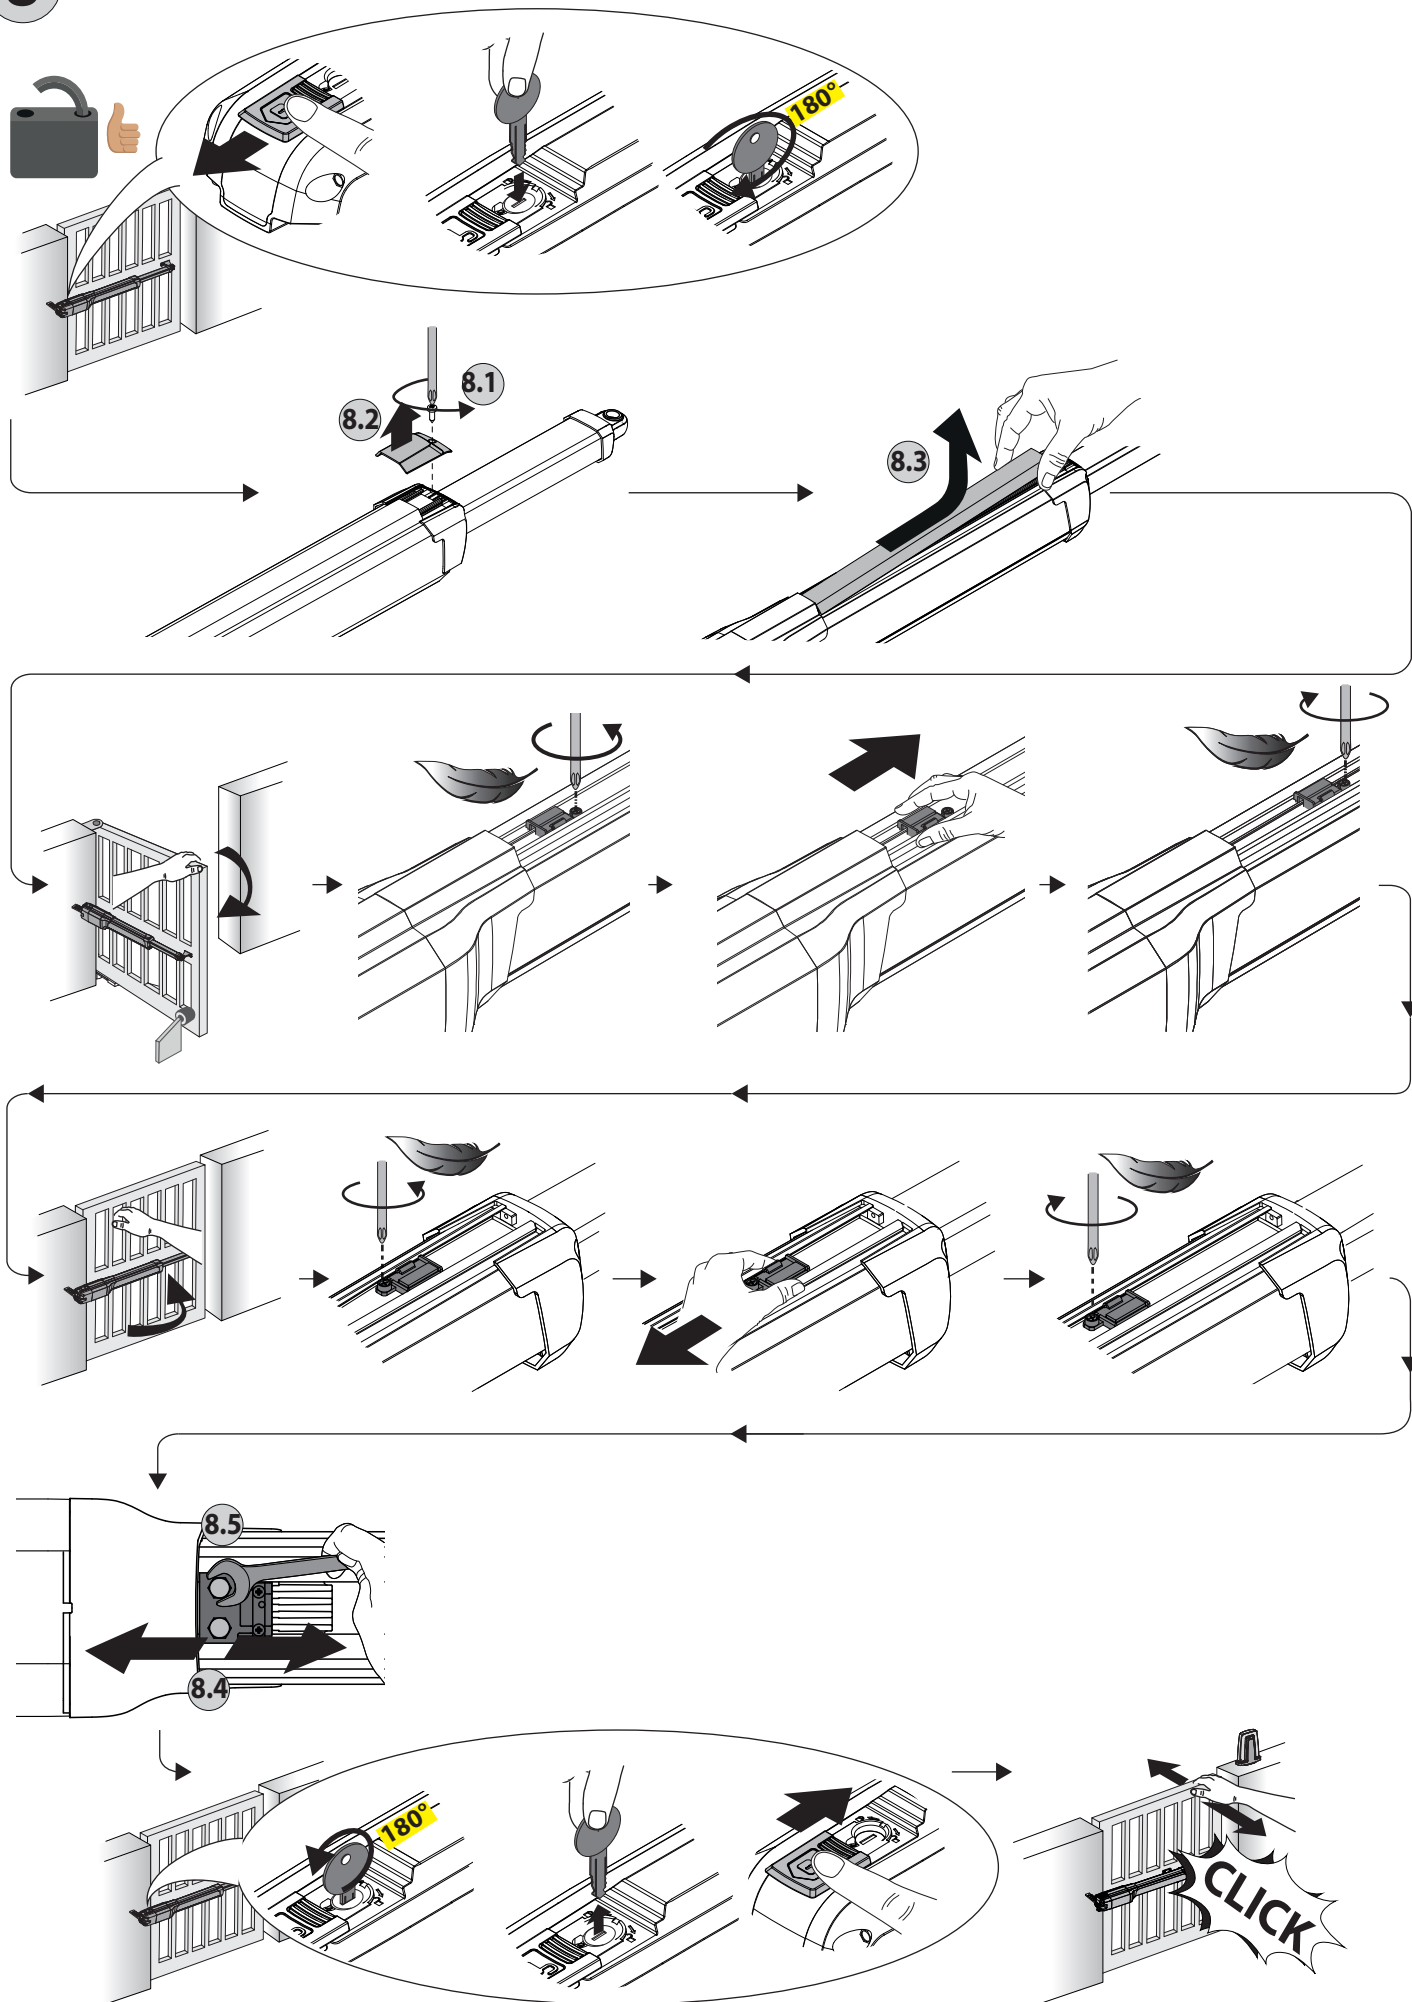


9

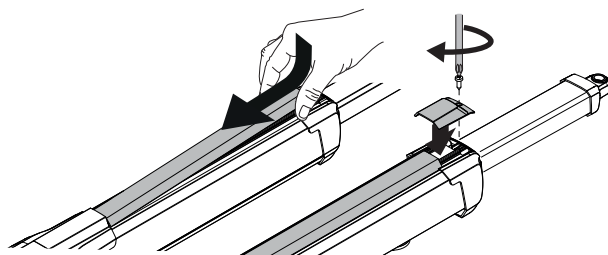


END

10

KUSTOS BT B 25

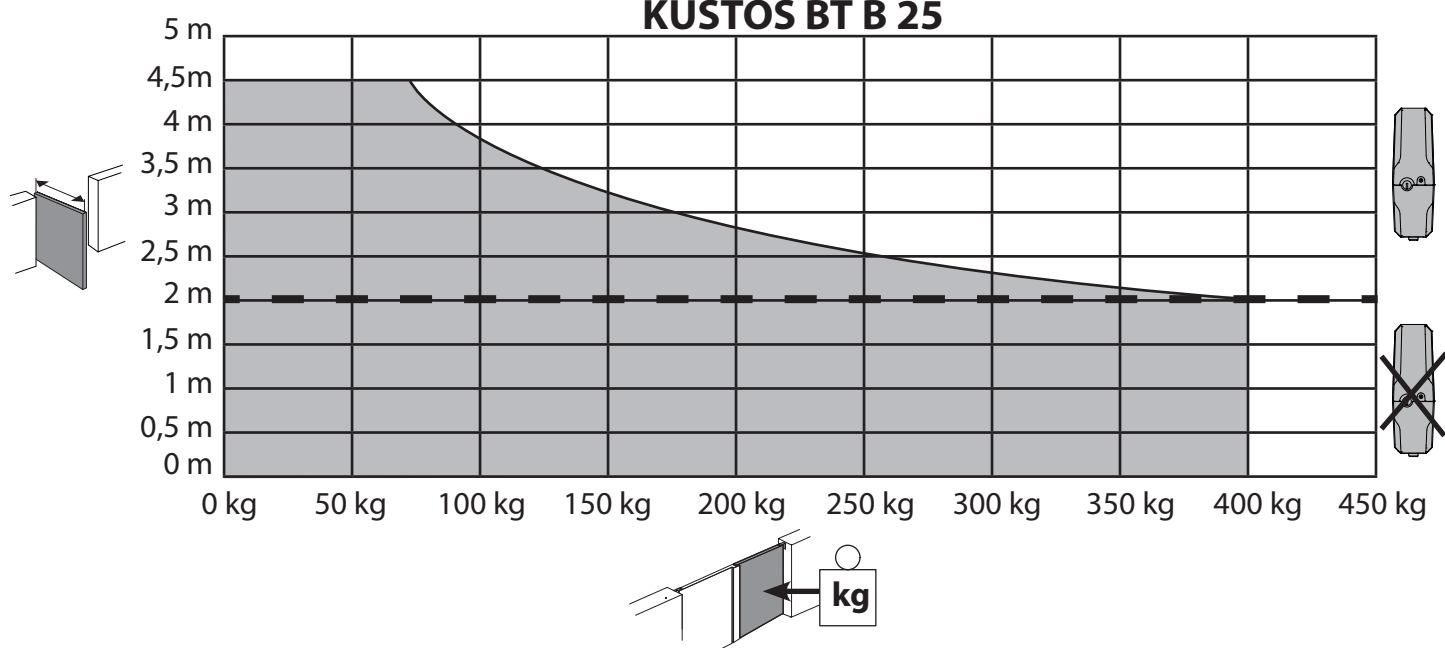

KUSTOS BT B 40

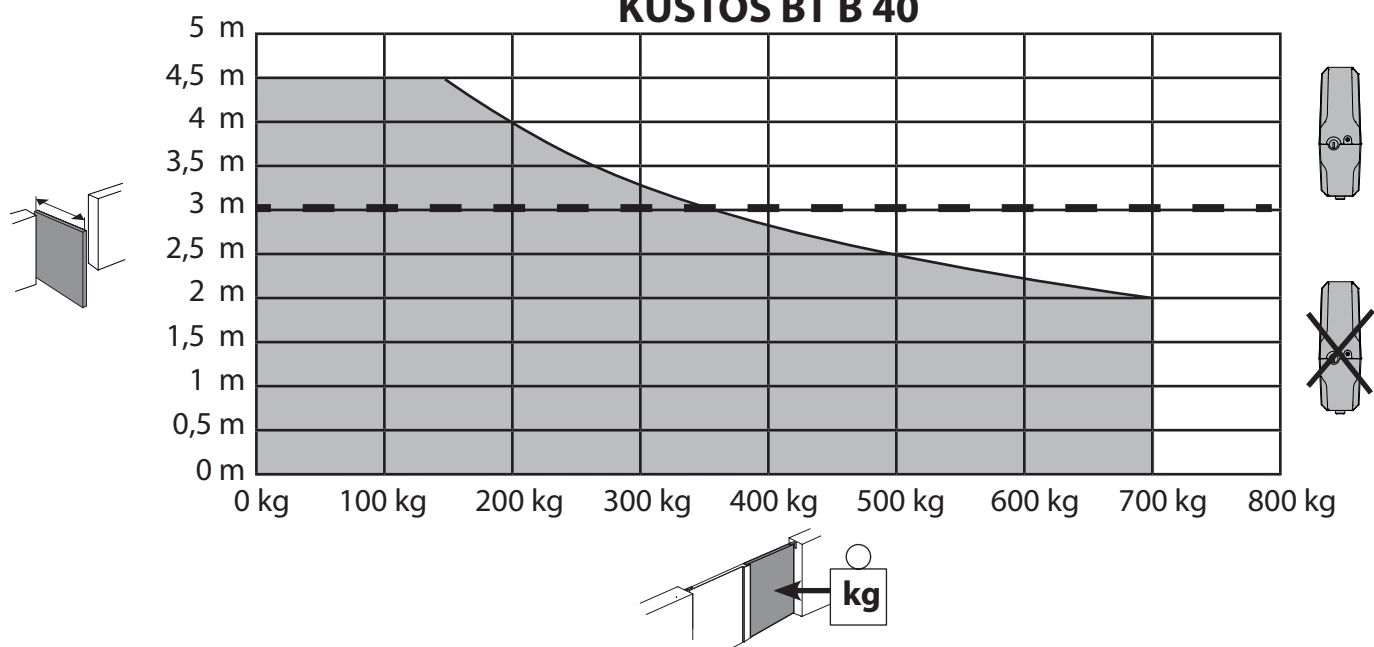



AZIENDA CON
SISTEMA DI GESTIONE
CERTIFICATO DA DNV GL
= ISO 9001 =
= ISO 14001 =



www.bft-automation.com

BFT Spa

Via Lago di Vico, 44 **ITALY**
36015 Schio (VI)
T +39 0445 69 65 11
F +39 0445 69 65 22

SPAIN

**BFT GROUP ITALIBERICA DE
AUTOMATISMOS SL**
Camí de Can Bassa, 6, 08401
Granollers, Barcelona, Spagna

FRANCE

AUTOMATISMES BFT FRANCE SAS
50 rue Jean Zay
69800 Saint-Priest, Francia

GERMANY

BFT ANTRIEBSSYSTEME GMBH
Faber-Castell-Straße 29, 90522
Obrasbach, Germania

UNITED KINGDOM

BFT AUTOMATION UK LTD
Unit C2-C3 The Embankment Business
Park, Vale Road Heaton Mersey Stockport
Cheshire SK4 3GL United Kingdom

BFT AUTOMATION (SOUTH) LTD
Enterprise House Murdock Road, Dorcan,
Swindon, England, SN3 5HY

PORTUGAL

BFT PORTUGAL SA
Urb. Pedrulha lote 9 - Apartado 8123,
3025-248 Coimbra Portugal

POLAND

BFT POLSKA SP ZOO
Marecka 49, 05-220 Zielonka, Polonia

IRELAND

BFT AUTOMATION IRELAND
Unit D3 City Link Business Park, Old Naas
Road, Dublin

CROATIA

BFT ADRIA DOO
Obrovac 39, 51218, Dražice, Croazia

CZECH REPUBLIC

BFT CZ SRO
Ustecka 533/9, 184 00 Praha 8,
Czech

TURKEY

BFT OTOMASYON KAPI
Şerifali Mahallesi, no, 34775
Ümraniye/İstanbul, Turchia

U.S.A.

BFT AMERICAS INC.
1200 S.W. 35th Avenue Suite B Boynton
Beach FL 33426

AUSTRALIA

BFT AUTOMATION AUSTRALIA PTY
29 Bentley St, Wetherill Park NSW
2164, Australia

EMIRATES

BFT MIDDLEEAST FZCO
FZS2 AA01 - PO BOX 262200, Jebel Ali Free
Zone South Zone 2, Dubai - United Arab

NEW ZEALAND

BFT AUTOMATION NEW ZEALAND
224/A Bush Road, Rosedale,
Auckland, New Zealand